

# P4750 Light Owl motion activated lamp Operation Manual

Thank you for purchasing the P4750 Light Owl motion activated lamp. Please read all instructions prior to use. Proper use and care of this item will allow years of productive use.

Place the battery-operated Light Owl on the floor next to your bed or nightstand. When the built-in motion sensor detects movement, the Light Owl's 6 bright LEDs illuminate the area automatically, and stay on for 20, 60 or 90 seconds (your selection). That means you'll be able to find your slippers easily, and safely navigate your way to the bathroom or kitchen, without disturbing others. Or carry the Light Owl with you through an unlit hallway or unfamiliar hotel room.

## Installation:

1. Detach the lamp from the base by rotating it counter-clockwise and lifting it from the base.
2. Open the battery door by depressing the clip. Install 4 AAA batteries following the polarity diagram in the battery compartment. Replace the battery door.
3. After setting the controls (see "Operation" below), attach the lamp to the base by setting it on the locking pins and rotate the lamp clockwise. You can mount the lamp and use it in the following ways:
  - a. You can rest the lamp on the floor (e.g. under your bed) or on a table. Rotate the swinging stand/handle to adjust the angle of the lamp.
  - b. You can hang the lamp using the stand/handle as a hook. Hook the handle over a doorknob, drawer pull, closet rod or other location.
  - c. You can hand-carry the lamp from location to location by fully rotating the stand/handle and using it as a convenient carry handle.
  - d. The base can be permanently mounted by using the two screw-holes provided. Detach the lamp, mount the base safely using the appropriate hardware and re-attach the lamp to the base.

## Operation:

After installing the correct batteries (see "Installation" above) operate the controls as follows:

1. OFF/ON: This 2 position switch on the lower left of the unit will turn the lamp functions off and on. Turn the unit off when not in use to conserve battery power. Remove the batteries when the unit is not used for a period longer than one month.
2. CONT/90/60/20: This 4 position switch on the lower right of the unit controls how long the lamp will illuminate once activated. Choose from CONTINUOUS, 90 seconds, 60 seconds or 20 seconds. CONTINUOUS will switch the lamp on until you use the OFF/ON control to switch the lamp off or choose a different time duration.